MITSUBISHI

CL2X16-D1C3V
CC-Link/LT Remote I/O Module

Thank you very much for purchasing this product.
Please read this manual thoroughly before starting to use the product and handle the product properly.

User's Manual

CC-Link/LT

MODEL	CL2X16-D1C3V-U
MODEL Number	13JP25
IB(NA)-0800258-A(0308)MEE	

© 2003 MITSUBISHI ELECTRIC CORPORATION

●SAFETY PRECAUTIONS●

(Read these precautions before using.)

Please read this manual carefully and pay special attention to safety in order to handle this product properly. Also pay careful attention to safety and handle the module properly.
These precautions apply only to Mitsubishi equipment. Refer to the user's manual of the CPU module to use for a description of the PLC system safety precautions.
These ● SAFETY PRECAUTIONS ● classify the safety precautions into two categories: "DANGER" and "CAUTION".

⚠ DANGER	Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.
⚠ CAUTION	Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by ⚠**CAUTION** may also be linked to serious results.
In any case, it is important to follow the directions for usage.
Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

[DESIGN PRECAUTIONS]

⚠ DANGER

- Configure an interlock circuit in a sequence program so that the system operates on the safety side using the communication status information in the event the data link falls into a communication problem. Otherwise, erroneous output and malfunction may result in accidents.
- Input could be switched on or off when a problem occurs in the remote I/O modules. So build an external monitoring circuit that will monitor any input signals that could cause a serious accident.

⚠ CAUTION

- Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.

[INSTALLATION PRECAUTIONS]

⚠ CAUTION

- Use the module in an environment that meets the general specifications contained in this manual. Using this module in an environment outside the range of the general specifications could result in electric shock, fire, erroneous operation, and damage to or deterioration of the product.
- Do not directly touch the module's conductive parts.
  Doing so could cause malfunction or trouble in the module.
- Securely fix the module in place using the DIN rail. If the module is not securely fixed, it may fall off or cause malfunction.

[WIRING PRECAUTIONS]

⚠ DANGER

- Perform installation and wiring after disconnecting the power supply at all phases externally. If the power is not disconnected at all phases an electric shock or product damage may result.

⚠ CAUTION

- Wire the module correctly upon verifying the product's rated voltage and the connector pin arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire and/or product failure.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.

[STARTING AND MAINTENANCE PRECAUTIONS]

⚠ DANGER

- Do not touch the connector pins when the power is on. It may cause an electric shock or malfunction.
- Before cleaning the module, be sure to shut off all the phases of the power supply externally. Failure to do so may cause failure or malfunction of the modules.

⚠ CAUTION

- Do not disassemble or modify the module. Doing so may cause failure, malfunction, injury, or fire.
- The module case is made of resin; do not drop it or subject it to strong shock. A module damage may result.
- Make sure to switch all phases of the external power supply off before installing or removing the module to/from the panel. Failure to do so may cause failure or malfunction of the modules.
- Before touching the module, always touch grounded metal, etc. to discharge static electricity from the human body, etc. Not doing so can cause the module to fail or malfunction.

[DISPOSAL PRECAUTIONS]

⚠ CAUTION

- When disposing of this product, treat it as industrial waste.

1. Overview

This user's manual explains specifications and names of individual parts of the CL2X16-D1C3V type CC-Link/LT remote I/O module (hereinafter abbreviated as remote I/O module).

2. Specifications

2.1 General Specifications

The General specifications for the remote I/O module are shown in the following table.

Item	Specifications					
Operating ambient temperature	0 to 55℃					
Storage ambient temperature	-25 to 75℃					
Operating ambient humidity	5 to 95%RH, non-condensing					
Storage ambient humidity	5 to 95%RH, non-condensing					
Vibration resistance	Conforming to JIS B 3502, IEC 61131-2		Frequency	Acceleration	Amplitude	Sweep count
		Under intermittent vibration	10 to 57Hz	———	0.075mm (0.003in.)	10 times each in X, Y, Z directions (for 80 min.)
			57 to 150Hz	9.8m/s²	———	
		Under continuous vibration	10 to 57Hz	———	0.035mm (0.001in.)	
			57 to 150Hz	4.9m/s²	———	
Shock resistance	Conforming to JIS B 3502, IEC 61131-2 (147 m/s², 3 times in each of 3 directions X, Y, Z)					
Operating ambience	No corrosive gases					
Operating altitude	2000m (6562ft.) max.					
Installation location	Inside control panel *3					
Overvoltage category *1	II max.					
Pollution level *2	2 max.					

*1 : This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises. Category II applies to equipment for which electrical power is supplied from fixed facilities.
The surge voltage withstand level for up to the rated voltage of 300 V is 2500 V.
*2 : This index indicates the degree to which conductive material is generated in terms of the environment in which the equipment is used.
Pollution level 2 is when only non-conductive pollution occurs. A temporary conductivity caused by condensing must be expected occasionally.
*3 : It can also be used in an environment other than on the control panel if the conditions such as usage ambient temperature and humidity are satisfied.

2.2 Performance specifications

The performance specifications for the remote I/O module are shown in the following table.

Item \ Type			CL2X16-D1C3V	
Number of inputs			16 points	
Isolation method			Photocoupler isolation	
Rated load voltage			24V DC (Common with the module power supply)	
Rated input current			Approx. 4mA	
Max. simultaneous ON input points			100%	
ON voltage/ON current			19V or higher/3mA or higher	
OFF voltage/OFF current			11V or lower/1.7mA or lower	
Input resistance			5.6kΩ	
Response time	Response time setting		0.5ms (High speed response type)	1.5ms (Standard type)
	OFF →ON	TYP.	0.05ms	—
		MAX.	0.1ms	1.5ms
	ON → OFF	TYP.	0.2ms	—
		MAX.	0.5ms	1.5ms
Common wiring method			16 points/1 common (sensor connector 3-wire type)	
Input method			Positive common	
Number of stations occupied			In 4-point mode: Occupies 4 stations, In 8-point mode: Occupies 2 stations In 16-point mode: Occupies 1 station	
Module power supply	Voltage		24V DC (-15 to +20%) (ripple ratio : within 5%)	
	Current consumption		45mA or lower (When 24V DC and all point is on)	
	Current on startup		70mA or lower (24V DC)	
Noise durability			DC type noise voltage 500Vp-p, noise width 1μs, noise carrier frequency 25 to 60Hz (noise simulator condition) First transient/noise burst IEC 61000-4-4 : 1kV	
Withstand voltage			500V AC for 1 minute between primary (external DC terminal) and secondary (internal circuit)	
Insulation resistance			10MΩ or more between primary (external DC terminal) and secondary (internal circuit) when measured with a 500V DC insulation resistance tester	
Protection class			IP2X	
Weight			0.08kg	
I/O part connection method			Open sensor connector (e-CON) × 16 (Connector plugs are sold separately (compatible wire size: 0.08 to 0.5 mm², depending on the connector plug used). Refer to the CC-Link/LT Catalog.)	
Module installation method			DIN rail installation, Can be installed in six directions	

3. Part Names

This section explains the names of the components for the remote I/O module.

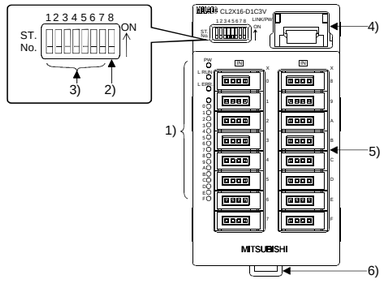

Connector for I/O interface	Pin No.	Signal name	Pin No.	Signal name	Pin No.	Signal name	Pin No.	Signal name
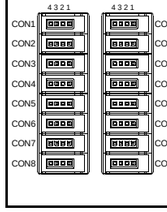	CON 1	1 +24V	CON 5	1 +24V	CON 9	1 +24V	CON 13	1 +24V
		2 +V		2 +V		2 +V		2 +V
		3 24G		3 24G		3 24G		3 24G
		4 X0		4 X4		4 X8		4 XC
	CON 2	1 +24V	CON 6	1 +24V	CON 10	1 +24V	CON 14	1 +24V
		2 +V		2 +V		2 +V		2 +V
		3 24G		3 24G		3 24G		3 24G
		4 X1		4 X5		4 X9		4 XD
	CON 3	1 +24V	CON 7	1 +24V	CON 11	1 +24V	CON 15	1 +24V
		2 +V		2 +V		2 +V		2 +V
		3 24G		3 24G		3 24G		3 24G
		4 X2		4 X6		4 XA		4 XE
	CON 4	1 +24V	CON 8	1 +24V	CON 12	1 +24V	CON 16	1 +24V
		2 +V		2 +V		2 +V		2 +V
		3 24G		3 24G		3 24G		3 24G
		4 X3		4 X7		4 XB		4 XF

Connector for CC-Link/LT interface	Pin No.	Signal name
	1	+24V
	2	DA
	3	DB
	4	24G

No.	Item	Description	
1)	Operating status indicator LEDs	LED name	Confirmation details
		PW	On: Power supply on. Off: The power supply is turned off or the voltage drop is too large.
		L RUN	On: Normal communication. Off : Communication cutoff (time expiration error).
		L ERR.	On: Indicates that a communication data error has occurred or the setting switch is outside the allowable range. Flicker at regular intervals: Indicates that the setting switch has been changed while current is being conducted. (The module continues to operate even while the LED is flickering. The changed settings will be reflected when the power has been restored.) Flicker at irregular intervals: Indicates that the terminal resistor is left unconnected or that the module or connection cable are affected by noise. Off: Normal communication.
		0 to F	Displays the ON/OFF status of the input (turned on in the ON status and turned off in the OFF status).
2)	Response time setting switch * (SW8)	Set the response time (OFF →ON/ON →OFF time) of the remote I/O module. OFF is set as default (factory-set). Noise may be taken in as input, if high speed response type is set. Be sure to set response time in consideration of the environment. ON: 0.5ms (High speed response type) OFF: 1.5ms (Standard type)	
3)	Station number setting switches* (SW1 to 7)	Select "10","20" or "40" to set the ten's place of the station number. Select "1","2","4" or "8" to set the one's place of the station number. All switches are set to OFF at shipment from the factory. Always set the station number within the range of 1 to 64. A setting error occurs and "L ERR." LED flickers if the value outside the range 1 to 64 is set. (Example) Set the switches as below when setting the station number to 32:	
4)	Connector for CC-Link/LT interface	Connector for connecting the CC-Link/LT communication line, module power supply and external power supply of the input part.	
5)	Connector for I/O interface	Sensor connector for connecting input signals.	
6)	Hook for DIN rail	Hook for installing the module on a DIN rail.	

Station number	Ten's place			One's place			
	40 (SW1)	20 (SW2)	10 (SW3)	8 (SW4)	4 (SW5)	2 (SW6)	1 (SW7)
32	OFF	ON	ON	OFF	OFF	ON	OFF

* Set up using a slotted screwdriver with a tip width of 0.9 mm or less.

4. Handling Precautions

(1) When using a DIN rail, attach the DIN rail after taking the following items into consideration:
  (a) Applicable DIN rail types (conform to JIS C 2812)
    TH35-7.5Fe
    TH35-7.5Al
  (b) Interval between the DIN rail's installation screws
    Tighten the screws using a pitch of 200mm (7.87in.) or less when attaching a DIN rail.
(2) To attach the remote I/O module to the DIN rail, press the centerline area of the DIN rail hook beneath the module until a click is heard.
(3) When installing the remote I/O module into a panel, etc., provide 15mm (0.59 in.) or more of space between the top and bottom of the module and other structures or parts so that good ventilation and ease of operation when exchanging modules can be secured.

5. Wiring

5.1 External wiring

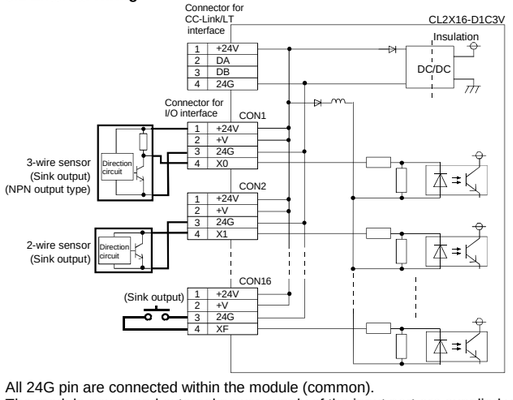

All 24G pin are connected within the module (common).
The module power and external power supply of the input part are supplied via the power adapter.

5.2 Connection and wiring of the connector for I/O interface

Wire the connector for I/O interface according to the following procedure:
(1) Verify that the plug cover is installed in the plug unit.
  Caution: Do not push the plug cover into the plug unit before the cable is inserted.
  Once a plug is pressure-displaced, it can no longer be reused.
(2) Insert the cable until it makes contact with the plug unit.

Point
- When inserting the cable, confirm that it has been inserted completely. If the cable is not inserted completely, it may cause contact failures.
- If the cross section of the cable is not round, the cable cannot be inserted smoothly. Cut the cable tip using pliers, etc., and make it as round as possible, then insert it.
- When inserting the cable, the cable may stick out from the front of the cover. In such a case, pull the cable backward so that the tip of the cable stays within the plug cover.

(3) Using a pliers or special tool, push the plug cover into the plug unit, and pressure-displace it. After performing pressure displacement, verify that the plug cover is securely attached to the plug unit, as shown in the figure at right.

Point
While performing pressure displacement, the plug cover may rise because it is not latched against the plug unit correctly. This condition indicates that pressure displacement is incomplete. Push the plug cover until it is securely installed in the plug unit.

6. External Dimensions

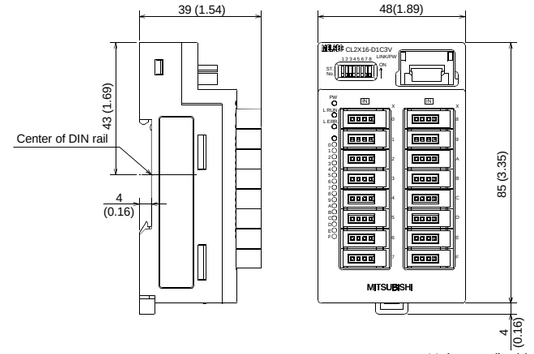

Unit: mm (inch)

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

⚠For safe use
- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061 Tel : +1-847-478-2100	Hong Kong	Ryoden Automation Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, HongKong Tel : +852-2887-8870
Brazil	MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. AV. Paulista 1471, Conj. 308, Sao Paulo City, Sao Paulo State, Brazil Tel : +55-11-283-2423	China	Ryoden Automation Shanghai Ltd. 3F Block5 Building Automation Instrumentation Plaza 103 Cao Bao Rd. Shanghai 200233 China Tel : +86-21-6475-3228
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0	Taiwan	Setsuyo Enterprise Co., Ltd. 6F., No.105 Wu-Kung 3rd.RD, Wu-Ku Hsiang, Taipei Hsine, Taiwan Tel : +886-2-2299-2499
U.K	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Herts., AL10 8XB,UK Tel : +44-1707-276100	Korea	HAN NEUNG TECHNO CO.,LTD. 1F Dong Seo Game Channel Bldg., 660-11, Deungchon-dong Kangsec-ku, Seoul, Korea Tel : +82-2-3660-9552
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo-Ingr.2 Via Paracelso 12, 20041 Agrate B., Milano, Italy Tel : +39-039-6053344	Singapore	Mitsubishi Electric Asia Pte, Ltd. 307 ALEXANDRA ROAD #05-01/02, MITSUBISHI ELECTRIC BUILDING SINGAPORE 159943 Tel : +65-6473-2308
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80 08190 - Sant Cugat del Valles, Barcelona, Spain Tel : +34-93-565-3131	Thailand	F. A. Tech Co.,Ltd. 898/28,29,30 S.V.City Building,Office Tower 2,Floor 17-18 Rama 3 Road, Bangkpongpang, Yannawa, Bangkok 10120 Tel : +66-2-682-6522
France	Mitsubishi Electric Europe B.V. French Branch 25 Boulevard des Bouvets, F-92741 Nanterre Cedex, France TEL: +33-1-5568-5568	Indonesia	P.T. Autoteknindo SUMBER MAKMUR Jl. Muara Karang Selatan Block A Utara No.1 Kav. No.11 Kawasan Industri/ Pergudangan Jakarta - Utara 14440 Tel : +62-21-663-0833
South Africa	Circuit Breaker Industries LTD. Tripswitch Drive, Elandsfontein Gauteng, South Africa Tel : +27-11-928-2000	India	Messung Systems Put,Ltd. Electronic Sadan NO:111 Unit No15, M.I.D.C BHOSARI,PUNE-411026 Tel : +91-20-712-2807
		Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, PostalBag, No 2, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE: 1-8-12, OFFICE TOWER Z 14F HARUMI CHUO-KU 104-6212, JAPAN
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.
Printed in Japan on recycled paper.